




Unpack Top

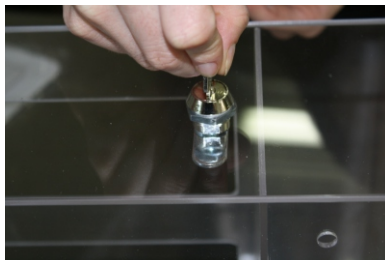

Unlock Lid



Remove Header Screws



Mount Header



Unpack Base



Screw Post on Base



Set Top on Post



Place Bolts in Top & Post

